
DAGÖ OPERATING INSTRUCTIONS

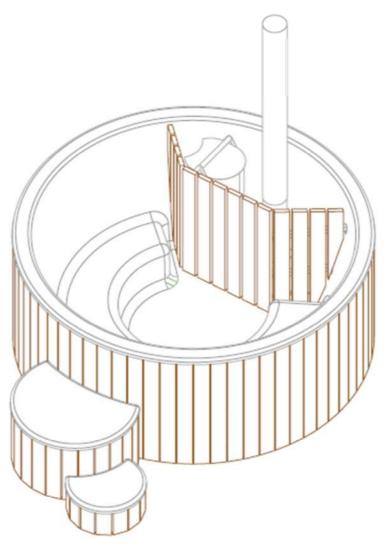




Copyright © Ösel Tubs

Contents


ABOUT	3
SAFETY	4
INSTALLATION OF THE HOT TUB	5
HEATING THE HOT TUB	
MAINTENANCE OF THE HOT TUB	9

 

About

Dear hot tub owner!

These instructions are provided to assist you in using and subsequently maintaining your hot tub. Before using the hot tub for the first time, make sure you read these operating instructions. If you have any questions, additional information is available on our website at: www.oeseltubs.com

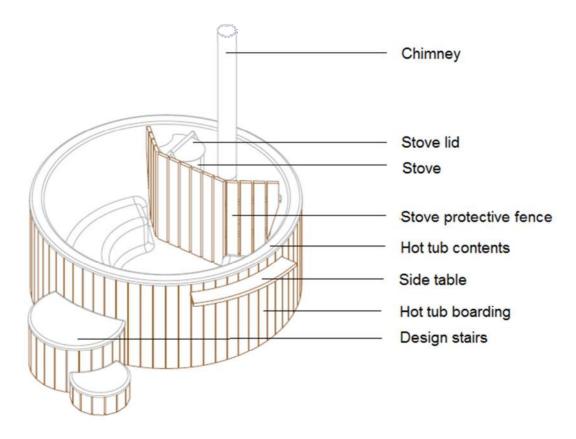

- ✓ Capacity 6 to 8 people
- √ Water consumption 1600 L
- ✓ Heating time 2 to 2.5 hours
- ✓ External diameter of the hot tub 2.24 m
- ✓ Internal diameter of the hot tub 2.02 m
- ✓ Height from the ground 0.9 m
- ✓ Seat depth 0,65 m
- √ Weight approximately 200 kg

Safety

When using the hot tub it is very important to follow local safety regulations, in order to avoid any risks to human health or property. The instructions below are common-sense recommendations to help prevent any immediate dangers from occurring.



Firing of the hot tub's stove may begin only after the hot tub has been filled with water!




This hot tub is a product that includes a hearth. Please be careful with a direct flame!

- ✓ For fire safety purposes, place the hot tub at a distance of at least 4 m from any building.
- ✓ Never leave the hot tub's stove unattended while heating.
- ✓ While the stove is being fired, the chimney and the stove are hot and may cause
 burns when touched.
- ✓ The hot tub is intended for accommodating a certain number of people. Make sure
 that the number of users in the hot tub does not exceed the permitted number, or
 else the hot tub may be subjected to excess weight.
- ✓ When firing the stove, heat the water to a recommended maximum of $+39 \, {}^{\circ}\text{C}$.
- ✓ Never jump into the hot tub.
- ✓ Never leave children unsupervised in the hot tub.
- ✓ The use of chlorine-containing detergents to wash the hot tub is prohibited.
- ✓ Never use abrasive cleaning agents to clean the hot tub.
- ✓ In winter, drain the hot tub after use to prevent any subsequent freezing of water in the hot tub.

Installation of the hot tub


- ✓ The hot tub will be delivered to the customer's home, packaged on a pallet.
- ✓ Place the hot tub on an even level surface (see Figure 1).
- ✓ It is recommended that you fill the surface beneath the hot tub with a layer of compacted gravel of approximately 20 cm (see Figure 1).

Figure 1

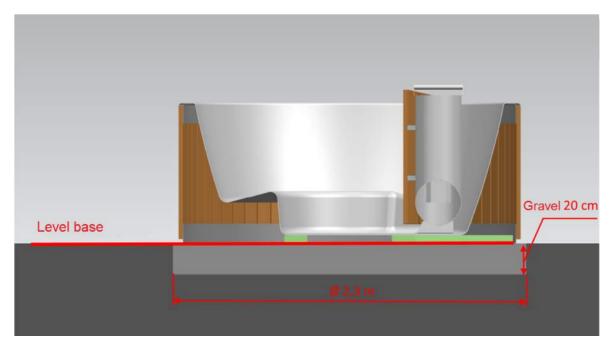


✓ It is advisable to drain any water from the hot tub into the sewerage system, stormwater drainage or, through an auxiliary hose, into an offlet elsewhere (see Figure 2).

Figure 2

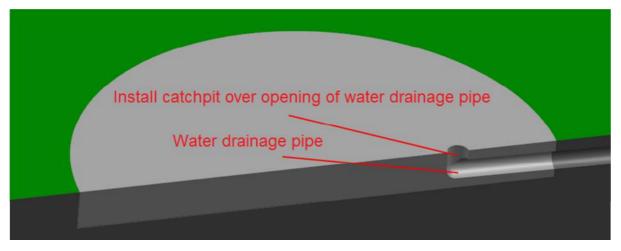

✓ The hot tub set includes as an accessory an additional pipe with an external diameter of 30 mm connecting to the catchpit whereby an outlet tube or a longer water hose may be connected (see Figure 3).

Figure 3

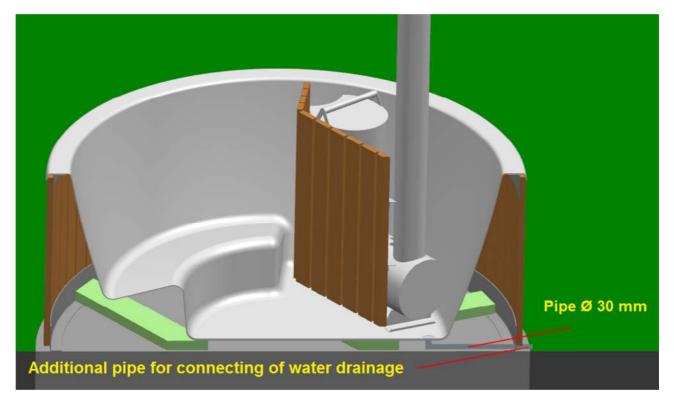

Heating the hot tub




Firing of the stove may begin only after the hot tub has been filled with water!



Water may be drained from the hot tub only after the embers in the stove have been fully extinguished!

- ✓ Before filling the hot tub with water make sure that the catchpit of the hot tub is sealed with a plug. It is advisable to connect the plug to a cord and a float, which will make it easier to open the plug later when draining the water from the hot tub.
- ✓ Fill the hot tub with water to the top mounting frame of the stove protective fence (see Figure 4).
- ✓ To heat water faster, it is advisable to cover the section of the hot tub that is external to the stove with a lid or a PVC cover.
- ✓ We recommend using only dry wood to fire the hot tub's stove. Use a spirits-based pellet fuel starter or lighter fluid to facilitate starting a fire (see Figure 4).
- ✓ When firing the stove of the hot tub, it should not be completely filled with firewood,
 as this may reduce the draft and impede the ignition of the firewood.

Figure 4

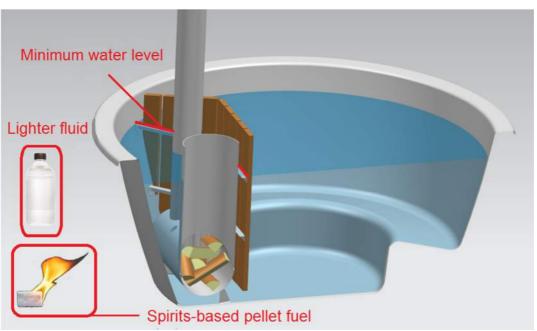

- ✓ When first starting a fire, it is advisable to use smaller wood chips.
- ✓ Once a fire has ignited, introduce dry split logs of approximately 40 to 45 cm in length into the stove.
- ✓ When you first begin to fire the stove, initially keep the lid off the stove to provide
 for a better draft of air. Using the lid of the stove, the movement of the air flow
 can be adjusted later, whilst preventing any water spray from entering the stove.
- ✓ It is recommend to heat the water in the hot tub to a maximum of +39 °C.
- ✓ It is advisable to use an ordinary ash scoop for removing any firebrands from the stove or a vacuum ash suction device for removing any ash.



Never use paper to light firewood, as this may cause excessive airborne sparks!

Maintenance of the hot tub

Cleaning and maintaining the hot tub regularly is important, particularly in terms of both hygiene and the long-term preservation of the hot tub.

NB! The instructions below are recommendations for users of the hot tub.

- ✓ It is advisable to wash and clean the hot tub after each use.
- ✓ It is advisable to shower before using the hot tub, to ensure better hygiene in the water.
- ✓ The hot tub's contents (except for timber parts) may be washed with a pressure washer, and we advise using household detergents and a soft cloth to clean it.
- ✓ No abrasive material should be used to clean the hot tub (will cause discolouration of the hot tub).
- ✓ It is advisable to apply *Tikkurila* timber oil to the timber details of the hot tub (brown, colour 5052, *Valtti* ***Puuöljy**) once a year.



In winter, always drain the water from the hot tub and stove after use. Water freezing may cause the hot tub or stove to break!

